


WORKPRO

W125163A

ORIGINAL OPERATING INSTRUCTIONS DUAL ACTION POLISHER

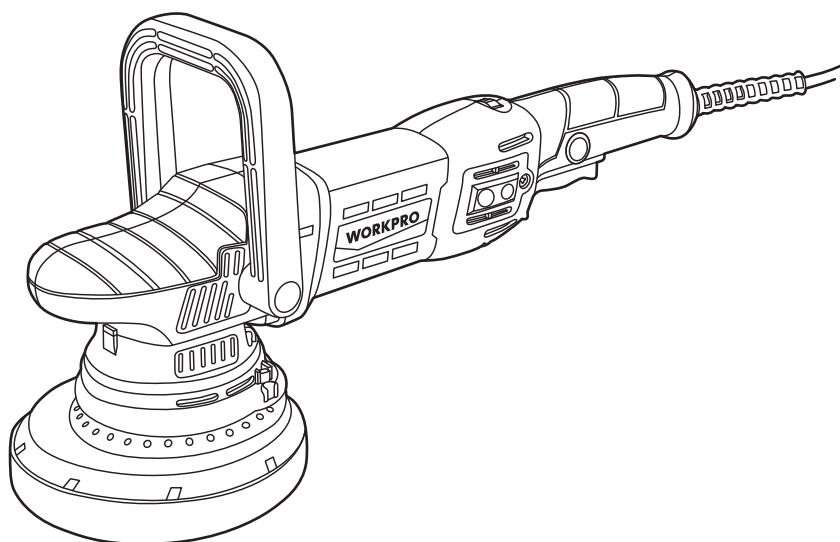

Model#: GX-CP04

Thank you for buying a WORKPRO product. Your dual action polisher has been engineered and manufactured to WORKPRO's high standard for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of rugged, trouble-free performance.



WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

SAVE THIS MANUAL FOR FUTURE REFERENCE



Distributed by :
Hangzhou GreatStar Industrial Co., Ltd.
No.35 Jiuahuan Road, Jiubao Town,
Hangzhou 310019, China
www.greatstartools.com

MADE IN CHINA

TABLE OF CONTENTS

■ Introduction	2
■ General power tool safety warnings	3,4,5
■ Safety warnings for grinding, sanding, wire brushing, polishing, or abrasive cutting-off operations	5,6
■ Additional specific safety instructions	7
■ Extension cords	7
■ Symbols	8
■ Know your product	9
■ Technical specification	9
■ Assembly	10
■ Operation	11,12
■ Maintenance	12,13
■ Trouble shooting	13,14
■ Disposal and recycling	14

INTRODUCTION

The machine is intended for polishing of painted or fiberglass surfaces. For reasons of electrical safety the machine must not be damp or operated in a humid environment. The machine may only be used for buffing or polishing.

GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.
Save all warnings and instructions for future reference.

1. WORK AREA SAFETY

- a. Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2. ELECTRICAL SAFETY

- a. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- d. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

3. PERSONAL SAFETY

- a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing

protection used for appropriate conditions will reduce personal injuries.

- c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- h. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

4. POWER TOOL USE AND CARE

- a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f. Keep cutting tools sharp and clean. Properly

GENERAL POWER TOOL SAFETY WARNINGS

maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

- g. Use the power tool, and accessories in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- h. Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5. SERVICE

- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

TAKE SPECIAL CARE TO GUARD AGAINST THESE DUSTS, INCLUDING THE FOLLOWING:

- All persons entering the work area must wear an approved mask specially designed for protection against harmful / toxic dusts, in addition to using the dust extraction facility, and keeping work area well ventilated.
- Children and pregnant women must not enter the work area.
- Do not eat, drink or smoke in the work area.

VIBRATION AND NOISE REDUCTION

To reduce the impact of noise and vibration emission, limit the time of operation, use low-vibration and lownoise operating modes as well as wear personal protective equipment.

Take the following points into account to minimize the vibration and noise exposure risks:

1. Only use the product as intended by its design and these instructions.
2. Ensure that the product is in good condition and well maintained.
3. Use correct application tools for the product and ensure they in good condition.
4. Keep tight grip on the handles/grip surface.
5. Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
6. Plan your work schedule to spread any high vibration tool use across a number of days.

EMERGENCY

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

- **Always be alert when using this product, so that you can recognise and handle risks early.** Fast intervention can prevent serious injury and damage to property.
- Switch off and disconnect from the power supply if there are malfunctions. Have the product checked by a qualified professional and repaired, if necessary, before you operate it again.

RESIDUAL RISKS

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:

- Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
- Injuries and damage to property due to broken application tools or the sudden impact of hidden objects during use.
- Danger of injury and property damage caused by flying objects



WARNING!

This product produces an elector magnetic field during operation! This field may under some circumstances interfere with active or passive medical implants! To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!

GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paint
- Crystalline silica from bricks and cement and other masonry products
- Arsenic and chromium from chemically treated timber

Your risk from these exposures varies, depending upon how often you do this type of work. To reduce your exposure to these chemicals:

- Work in a well-ventilated area.
- Work with approved protective equipment, such as those dust masks that are specially designed to filter microscopic particles.

For more information go to www.P65Warnings.ca.gov

SAFETY WARNINGS FOR GRINDING, SANDING, WIRE BRUSHING, POLISHING, OR ABRASIVE CUTTING-OFF OPERATIONS

- 1. This power tool is intended to function as a and polisher. Read all safety warnings, instructions, illustrations and specifications provided with this power tool.** Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.
- 2. Operations such as grinding, wire brushing, or cutting-off are not recommended to be performed with this power tool.** Operations for which the power tool was not designed may create a hazard and cause personal injury.
- 3. Do not use accessories which are not specifically designed and recommended by the tool manufacturer.** Just because the accessory can be attached to your power tool, it does not assure safe operation.
- 4. The rated speed of the accessory must be at least equal to the maximum speed marked on the power tool.** Accessories running faster than their RATED SPEED can break and fly apart.
- 5. The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool.** Incorrectly sized accessories cannot be adequately guarded or controlled.
- 6. The arbor size of wheels, flanges, backing pads or any other accessory must properly fit the spindle of the power tool.** Accessories with arbor holes that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.
- 7. Do not use a damaged accessory. Before each use inspect the accessory such as abrasive wheels for chips and cracks, backing pad for cracks, tear or excess wear, wire brush for loose or cracked wires. If power tool or accessory is dropped, inspect for damage or install an undamaged accessory. After inspecting and installing an accessory, position yourself and bystanders away from the plane of the rotating accessory and run the power tool at maximum no-load speed for one minute. Damaged accessories will normally break apart during this test time.**
- 8. Wear personal protective equipment. Depending on application, use face shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and workshop apron capable of stopping small abrasive or workpiece fragments. The eye protection must be capable of stopping flying debris generated by various operations. The eye protection must be capable of stopping flying debris generated by various operations. The dust mask or respirator must be capable of filtering out particles generated by your operation. Prolonged exposure to high intensity noise may cause hearing loss.**
- 9. Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment. Fragments of workpiece or of a broken accessory may fly away and cause injury beyond immediate area of operation.**

SAFETY WARNINGS FOR GRINDING, SANDING, WIRE BRUSHING, POLISHING, OR ABRASIVE CUTTING-OFF OPERATIONS

10. **Hold power tool by insulated gripping surfaces only, when performing an operation where the accessory may contact hidden wiring or its own cord.** An accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and shock the operator.
11. **Position the cord clear of the spinning accessory.** If you lose control, the cord may be cut or snagged and your hand or arm may be pulled into the spinning accessory.
12. **Never lay the power tool down until the accessory has come to a complete stop.** The spinning accessory may grab the surface and pull the power tool out of your control.
13. **Do not run the power tool while carrying it at your side.** Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.
14. **Regularly clean the power tool's air vents.** The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.
15. **Do not operate the power tool near flammable materials.** Sparks could ignite these materials.
16. **Do not use accessories that require liquid coolants.** Using water or other liquid coolants may result in electrocution or shock.
17. Maintain labels and nameplates on the tool. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
18. Avoid unintentional starting. Prepare to begin work before turning on the tool.
19. Do not depress the spindle lock when starting or during operation.
20. Do not leave the tool unattended when it is plugged into an electrical outlet. Turn off the tool, and unplug it from its electrical outlet before leaving.
21. Use clamps (not included) or other practical ways to secure and support the workpiece to a stable platform.
22. This product is not a toy. Keep it out of reach of children.
23. People with pacemakers should consult their physician (s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure. In addition, people with
 - pacemakers should:
 - Avoid operating alone.
 - Do not use with power switch locked on.
 - Properly maintain and inspect to avoid electrical shock. Properly ground power cord. Ground fault circuit Interrupter (GFCI) should also be implemented – it prevents sustained electrical shock.
24. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

ADDITIONAL SPECIFIC SAFETY INSTRUCTIONS



WARNING!

RISK OF PERSONAL INJURY:

- Always use proper guards when grinding and wear eye protection. Use only accessories rated at least 5500/min.
- Failure to properly seat the bonnet to the pad may result in the bonnet being thrown from the pad.
- Always maintain a firm grip on the Waxer/Polisher handle(s) to prevent loss of control.
- Use of this tool can generate and/or disburse dust, which may cause serious and permanent respiratory or other injury. Always use NIOSH/OSHA approved respiratory protection appropriate for the dust exposure. Keep direct particles away from face and body.

Note: Only those dust masks suitable for working with lead paint dust and fumes should be used. Ordinary painting masks do not offer this protection. See your local hardware dealer for the proper NIOSH/OSHA approved mask.

CAUTION: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:

- Make sure that adjusting keys and wrenches are detached from the unit before turning it ON.
- Use clamps or another practical way to secure and support the work piece to a stable platform. Holding the work by hand or against your body is unstable and may lead to loss of control.

- Do not use tool if ON/OFF Trigger does not turn it ON or OFF. Any tool that cannot be controlled with the power switch is dangerous and must be repaired.
- Operate this waxer/polisher **ONLY** on AC current on which the voltage is within correct limits (120 volts). Never attempt to operate on DC current. To do so may seriously damage the waxer/polisher.
- Always disconnect the unit's cord plug from power source before making any adjustments, changing bonnets or storing the tool to reduce the risk of accidentally starting the waxer/polisher.
- Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the waxer/polisher's operation. If damaged, have the tool serviced before using.
- Use only accessories that are supplied or recommended by the manufacturer for this model. Refer to the "Accessories" section of this Instruction Manual for more information.
- **NEVER** allow Gasoline, Brake Fluids or any petroleum-based products to come in contact with plastic parts or power cord. They contain chemicals that can damage, weaken or destroy plastic and insulation.

EXTENSION CORDS

When using an extension cord with your Polisher refer to the following table to determine the required A.W.G. wire size. Before using the Polisher, make sure the power cord and extension cord are in good working condition. Make repairs or replacements before using the Polisher. Only use extension cords that are rated for outdoor use.

	Length of Extension Cord			
	25 Feet 7.5 Meters	50 Feet 15.25 Meters	100 Feet 30.5 Meters	150 Feet 45.7 Meters
Amps	A.W.G. Wire Size			
0-6	18	16	16	14
7-10	18	16	14	12
11-12	16	16	14	12
13-16	14	12	Not recommended	

SYMBOLS

On the product, the rating label and within these instructions you will find among others the following symbols and abbreviations. Familiarize yourself with them to reduce hazards like personal injuries and damage to property.

V~ Volt, (alternating voltage)

Hz Hertz

W Watt

RPM Revolutions per minute



Note / Remark.



Read the instruction manual.



Wear eye protection.



Wear protective gloves.

mm Millimetre

kg Kilogram



Caution / Warning.



Wear hearing protection.



Wear a dust mask.



Wear protective, slipresistant footwear.



Switch the product off and disconnect it from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.



This product is of protection class II. That means it is equipped with enhanced or double insulation.





Comforms to American directives.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

KNOW YOUR PRODUCT

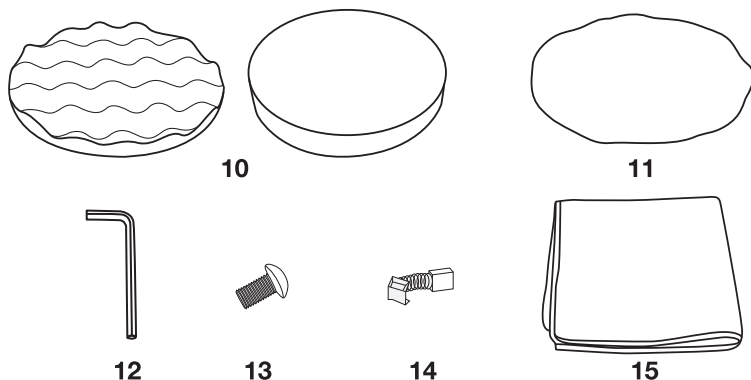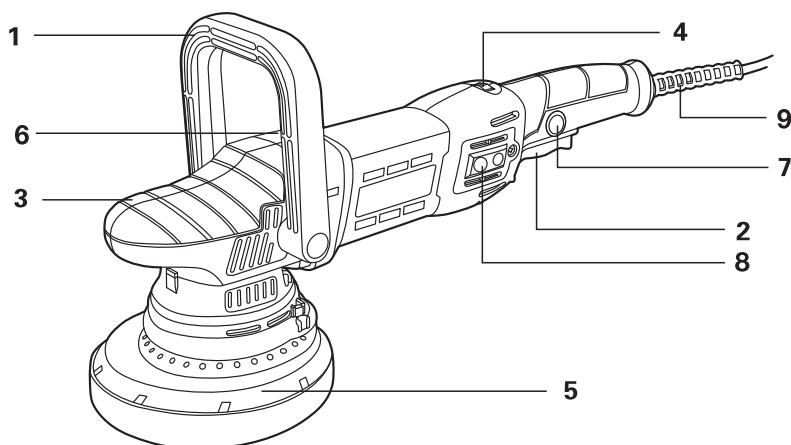

1. Auxiliary handle
2. ON/OFF trigger
3. Grip hood
4. Speed adjuster
5. Backing pad

6. Gear head
7. Lock on button
8. Carbon brush cover
9. Power cord and plug
10. Foam pad x6

11. Wool polishing buffing pad x 1
12. Hex key x1
13. Hex head bolt x3
14. Carbon brush x2
15. Towel x1

TECHNICAL SPECIFICATION

Model #:	W125163A
Rated Voltage:	120V~,60Hz
Rated Power:	9A
No-load Speed:	1400-5000RPM
Diameter:	6in (150mm)
Pad oscillates and rotates on varying orbits(Eccentricity):	15mm


ASSEMBLY




To reduce the risk of injury, turn the unit off and disconnect it from the power source before installing and removing accessories, before adjusting or making repairs. An accidental start-up can cause injury.

INSTALLING THE AUXILIARY HANDLES

- **TO PREVENT SERIOUS INJURY:** Hold and control this tool with one hand on rear handle while other hand on auxiliary handle or front gripped head.
- The D-handle (included) may be installed for either right-hand or left-hand use.
Option 1: using with the D-handle. Attach the D-handle to the sides of the front cover, using the hex key and two hex head bolts.

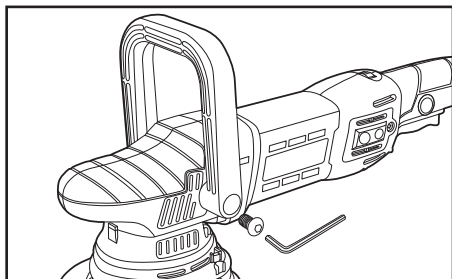


- Option 2: Using with a side handle (* Side handle not included).
This tool can be used with many standard angle grinder side handles which can be installed on either side.

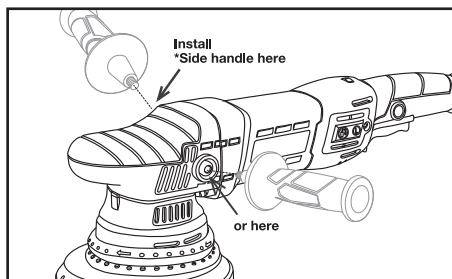

INSTALLING THE BACKING PAD/FOAM PAD

1. The accessory **MUST** be:
 - Rated to at least 5500 rpm.
 - No larger than 6" (150 mm) in diameter.
 - Undamaged
 - A backing pad.
2. Fasten the backing pad in place by using the hex key to tighten hex head bolts.

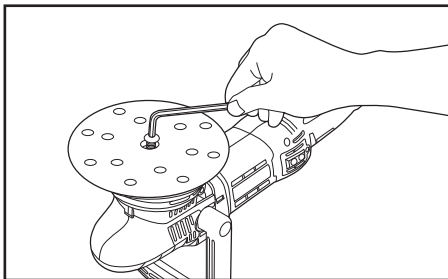


WARNING!

To install pad or disc on velcro backing plate, center the pad or disc on plate and press firmly.
To remove pad or disc from velcro backing plate grip pad or disc firmly and pull from plate.

ON/OFF TRIGGER / LOCK ON BUTTON


- Press and hold the ON/OFF trigger, and then press the lock on button down slightly to turn the unit on. Press the ON/OFF trigger, then release it to turn the unit OFF.

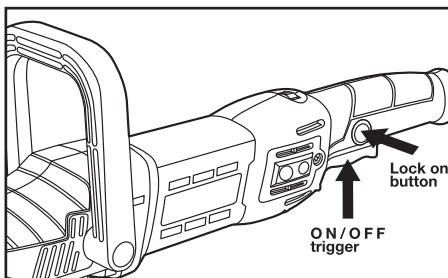

OPERATION

SPEED CONTROL DIAL

- The speed control dial features 6 settings (numbered 1 to 6 on the dial), allowing you to increase or decrease speed from 1,400 to 5,000 RPM. Optimal speed setting for each application is dependent on work surface and personal preference; however manufacturer recommends using lower settings for waxing/polishing.

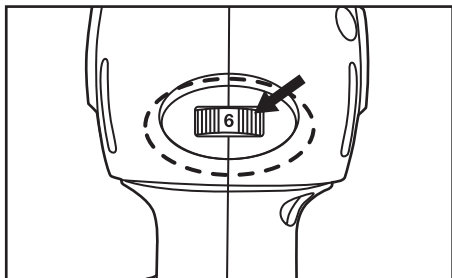

POLISHING

1. Make sure the surface to polish has been thoroughly washed, and is free of dust, dirt, oil, grease, etc.
2. Place a clean foam pad securely onto the backing pad.
3. Apply about two tablespoons of wax (not included) Evenly on the clean foam pad.

CAUTION! Do not apply the wax directly to the surface of the vehicle. The amount of wax needed will vary according to the size of the vehicle being waxed.

4. Rotate the Speed Dial to select the desired speed between 1 and 6.

- **NOTICE:** Only use the slower speeds for polishing. Otherwise, damage may occur to the paint being polished. **WORKPRO** Tools is not responsible for damage to the vehicle's finish due to improper use of this polisher.

5. Plug the power cord into an electrical extension cord (not included). Then, plug the extension cord into a grounded, GFCI-protected, 120 volt electrical outlet.

WARNING!

To prevent electric shock, keep cord connection off ground.

- **Note:** always start and stop the polisher while it is held firmly against the surface of the vehicle. Failure to do so may result in the foam pad or wool polishing buffing pad being thrown from the polishing pad.

6. To start, position the unit on the area to be polished, grip the polisher firmly with both hands and press the trigger. Release the trigger to stop. To use the lock on button, while holding in the trigger, press the lock on button, then release the trigger. The polisher will stay on. Press and release the trigger to stop.

7. Keep pressure off of the polisher when operating. The foam pad should **LIGHTLY** contact the polishing surface.

8. Begin using the polisher to apply wax to the vehicle. Apply the wax to all flat surfaces with broad, sweeping strokes in a crisscross pattern. Apply the wax evenly over the surface of the vehicle.

9. Add additional wax to the polishing pad as needed. To add additional wax:

- a. Stop the tool and allow the polisher to come to a complete stop.

- b. Add a small amount of wax evenly over the pad surface.

- c. Avoid using too much wax. For additional applications of wax to foam pad, reduce the amount of wax. The foam pad will not absorb as much wax in subsequent applications.

- d. Resume operation.

- **Note:** The most common error when waxing/polishing a vehicle is applying too much wax. If the Foam Pad becomes saturated with wax, applying wax will be more difficult and will take longer. Applying too much wax may also reduce the life of the Foam Pad. If the Foam Pad continually comes off the Backing Pad during use, too much wax may have been applied.

OPERATION

10. After the wax has been applied to the vehicle's surface, turn off the polisher. Unplug the power cord from the electrical extension cord.
 11. Remove the foam pad from the backing pad and with your hand and the foam pad, apply wax to any hard to reach areas of the vehicle such as around lights, door handles, under bumpers, etc.
 12. Allow sufficient time for the wax to dry.
 13. Replace the foam pad and place a clean wool polishing buffing pad.
- **Note:** Start and stop the polisher only while it is held firmly against the surface of the vehicle. Failure to do so may result in the bonnet being thrown from the foam pad.
14. Start the polisher and begin buffing off the dried wax.
 15. When you have removed as much wax as you can with the polisher, turn off and unplug the polisher.
- **NOTICE:** To prevent damage to the foam pad, wool polishing buffing pad, and vehicle finish: Only apply the pad/bonnet flat against the surface, see below.



MAINTENANCE

1. BEFORE EACH USE, inspect the general condition of the tool. Check for:
 - Loose hardware
 - Misalignment or binding of moving parts
 - Cracked or broken parts
 - Damaged electrical wiring, and any other condition that may affect its safe operation
2. AFTER USE, wipe external surfaces of the tool with clean cloth.
3. Periodically blow dust and grit out of the motor vents using dry compressed air. Wear ANSI-approved safety goggles and NIOSH-approved breathing protection while doing this.
4. Periodically recheck all nuts, bolts, and screws for tightness.
5. Remove foam pad from backing pad when polisher is not in use. This will allow backing pad to dry and retain its original shape. Wash with mild soap and water before storing.


MAINTENANCE

6. Use only a clean cloth and mild detergent to clean the body of the polisher. Do not use solvents. Do not immerse any part of the tool in liquid.

7. **CARBON BRUSH MAINTENANCE.** The carbon brushes may require maintenance when the motor performance of the tool decreases or stops working completely. To maintain the brushes:

- Remove the carbon brush cover on each side of the motor housing.
- Remove the carbon brushes from the housing. Keep track of which orientation the old carbon brushes were in to prevent needless wear if they will be reinstalled.
- If either carbon brush is worn down by more than 1/2, replace them both.
- To clean old carbon brushes before reusing them, rub the contact areas with a pencil eraser.
- Reinsert the old carbon brushes in the same orientation to reduce wear.
- When installing, make sure the carbon portions of the brushes contact the motor armature, and that the springs face away from the motor. Also, make sure the springs operate freely.

g. Replace the Carbon Brush Covers. Do not over tighten.

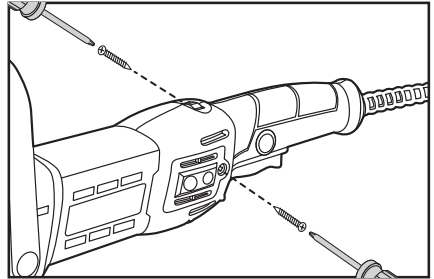

■ **Note:** New carbon brushes tend to spark when first used until they wear and conform to the motor's armature.

⚠ WARNING!

If the supply cord of this power tool is damaged, it must be replaced only by a qualified service technician.

TROUBLE SHOOTING

Problem	Possible Causes	Likely Solutions
Tool will not start.	1. Cord not connected. 2. No power at outlet. 3. Internal damage or wear. (Carbon brushes or switch, for example.)	1. Check that cord is plugged in. 2. Check power at outlet. If outlet is unpowered, turn off tool and check circuit breaker. If breaker is tripped, make sure circuit is right capacity for tool and circuit has no other loads. 3. Replace carbon brushes and/or have technician service tool.
Performance decreases over time.	Carbon brushes worn or damaged.	Replace brushes.
Excessive noise or rattling.	Internal damage or wear. (Carbon brushes or bearings, for example.)	Have technician service tool.
Overheating.	1. Forcing tool to work too fast. 2. Blocked motor housing vents. 3. Motor being strained by long or small diameter extension cord.	1. Allow tool to work at its own rate. 2. Wear ANSI-approved safety goggles and NIOSH-approved dust mask/respirator while blowing dust out of motor using compressed air. 3. Eliminate use of extension cord. If an extension cord is needed, use one with the proper diameter for its length and load.

TROUBLE SHOOTING

Tool does not sand or polish effectively.	1. Disc accessory may be loose on Spindle. 2. Disc accessory may be damaged, worn or wrong type for the material. 3. Wax sprays off polishing pad.	1. Be sure disc accessory arbor is correct and outer flange/arbor nut is tight. 2. Check condition and type of disc accessory. Use only proper type of disc accessory in good condition. 3. Reduce RPM to minimum setting.
 Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.		

DISPOSAL AND RECYCLING



Disposal of the appliance

A crossed-out wheeled bin icon means: Batteries and rechargeable batteries, electrical or electronic devices must not be disposed of with household waste. They may contain substances that are harmful to the environment and human health.

Consumers must dispose of waste electrical devices, spent portable batteries and rechargeable batteries separately from household waste at an official collection point to ensure that these items are processed correctly. Information on returning these items is available from the seller. Sellers are required to accept these items free of charge. Batteries and rechargeable batteries, which are not permanently installed in waste electrical devices, must be removed prior to disposal and must be disposed of separately. Lithium batteries and battery packs in all systems must only be returned to a collection point when discharged. Batteries must always be protected against short circuits by covering the poles with adhesive tape.

All end users are responsible for deleting any personal data stored on waste devices prior to their disposal.



Disposal of the packaging

The packaging consists of cardboard and correspondingly marked plastics that can be recycled. Make these materials available for recycling.