


WORKPRO

OPERATOR'S MANUAL

ITEM NO.	ITEM NAME
W158010	2PK 8x4x1ft Outdoor Galvanized Raised Garden Bed Kit-Light Green
W158011	2PK 8x4x1ft Outdoor Galvanized Raised Garden Bed Kit-Black

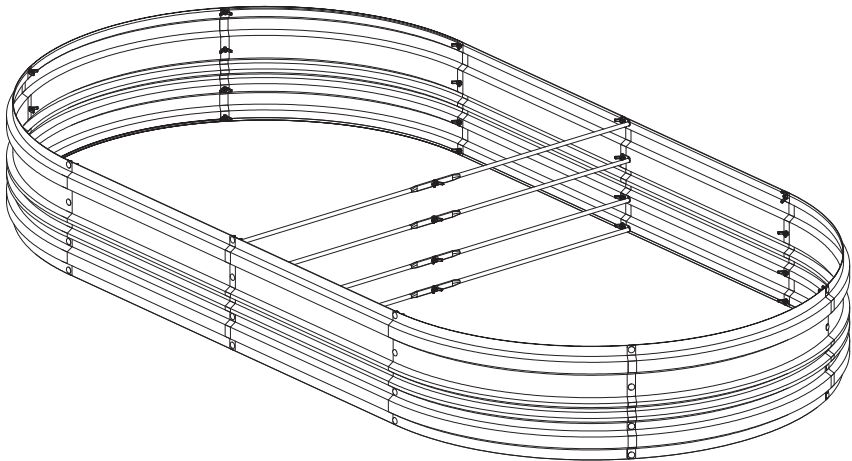

USE PRECAUTION
For your safety



INSTRUCTION
MANUAL
Read and understand



PROTECTIVE GLOVES
Must be worn when
assembly



CAUTION: Read and follow all Safety Rules and Operating instructions before first use of this product.

NOTE: Ensure all components are present. If any components are missing, do not proceed with assembly. Please send an email to service@greatstartools.com or call 877-876-7562.

SAVE THIS MANUAL FOR FUTURE REFERENCE



Distributed by:
Hangzhou GreatStar Industrial Co., Ltd.
No.35 Jiuhuan Road, Shangcheng District,
Hangzhou 310019, China
www.greatstartools.com
MADE IN CHINA


SAFETY INFORMATION

To reduce the risk of serious injury, read and follow the safety instructions below before assembling and using this product.

1. This product is intended for outdoor use only.
2. Any installation or maintenance of the product must be carried out by adults only.
3. The metal may have sharp edges or corners. The use of protective gloves is recommended.
4. Do not stand on or use any part of this item as a step ladder.
5. Firmly secure all bolts and wingnuts before use.

PACKAGE CONTENTS

Ensure all components are present. If any components are missing, do not proceed with assembly.

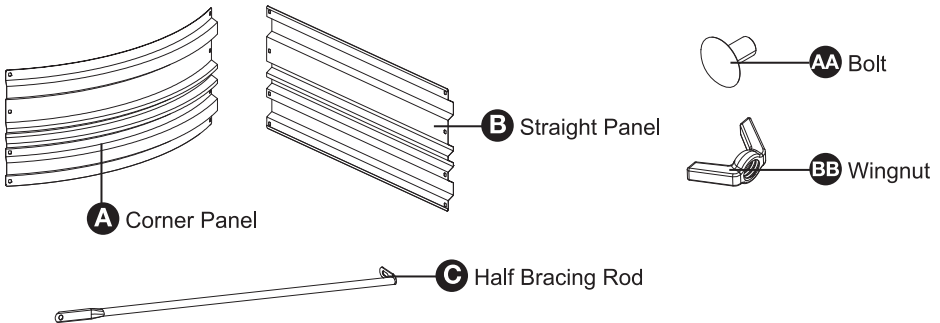


ITEM NO.	PART	DESCRIPTION	QTY	TOOLS (INCLUDED)	
W158010 W158011	A	Corner Panel	12	 Protective Gloves	 12mm Wingnut Driver
	B	Straight Panel	8		
	C	Half Bracing Rod	16	TOOLS (NOT INCLUDED)  Electric Drill	
	AA	Bolt	88+4 (Spare)		
	BB	Wingnut	88+4 (Spare)		

ASSEMBLY


STEP 1: REMOVE PROTECTIVE FILMS

Remove protective films from all panels, and lay panels on a flat surface or the packaging material.

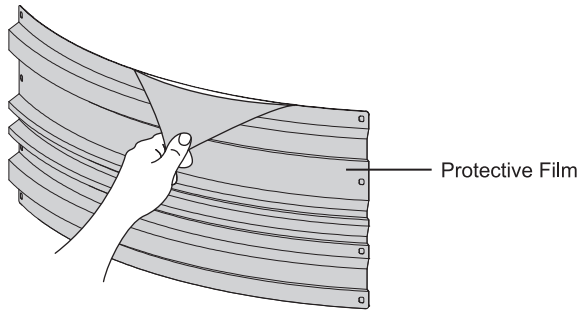

STEP 2: ATTACH THE CORNER PANEL

- Attach three corner panels (A) together with eight bolts (AA) and wingnuts (BB) and finger tighten to desired tightness. **Do not tighten the bolts (AA) and wingnuts (BB) completely.**


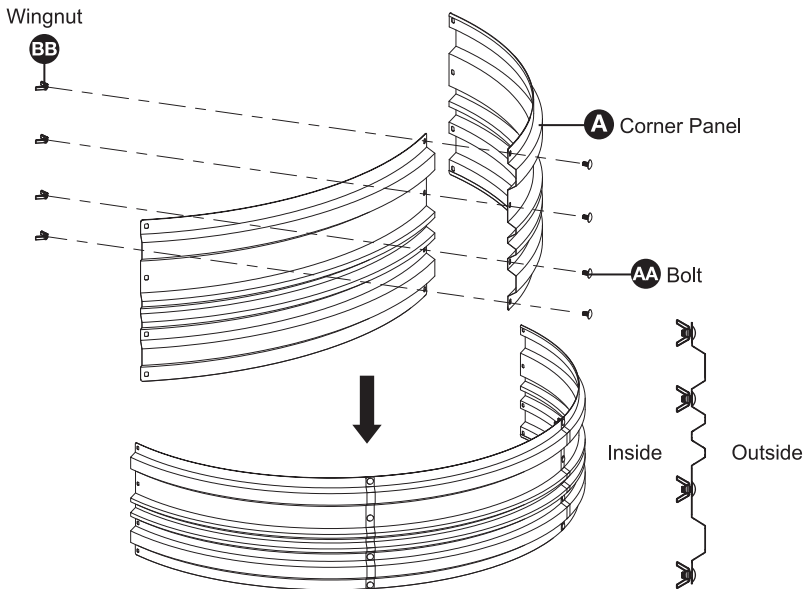


PART	A	AA	BB
DESCRIPTION	Corner Panel	Bolt	Wingnut
QTY	3	8	8

ASSEMBLY

STEP 3: ATTACH THE STRAIGHT PANEL AND CORNER PANEL

- Attach the straight panel (B) to the corner panels (A) together with four bolts (AA) and wingnuts (BB) and finger tighten to desired tightness. Make sure corner panels (A) are attached outside of the straight panels (B). **Do not tighten the bolts (AA) and wingnuts (BB) completely.**
- Repeat the above procedure to install the other straight panel.

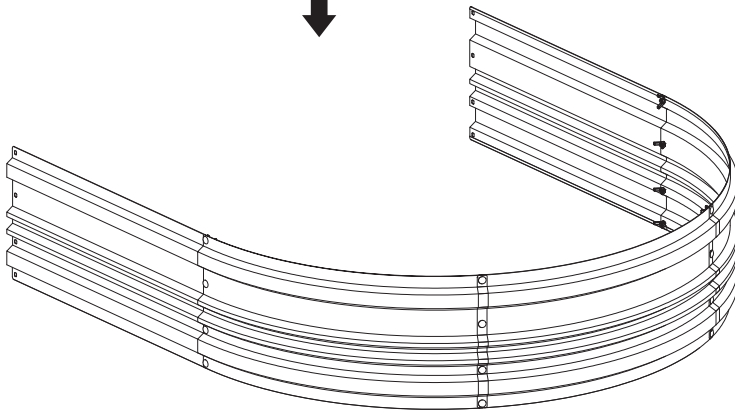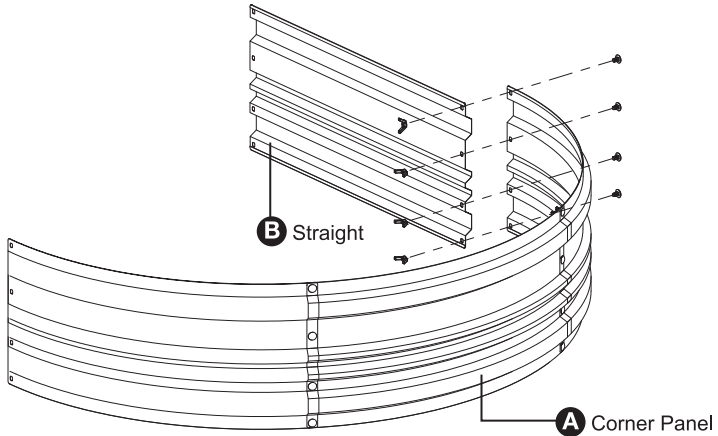


Called "U-shaped frame"

PART	B	AA	BB
DESCRIPTION	Straight Panel	Bolt	Wingnut
QTY	2	8	8

ASSEMBLY

STEP 4: ASSEMBLE THE SECOND U-SHAPED FRAME


Repeat step 2-3 to install the other U-shaped frame. **Do not tighten the bolt (AA) and wingnut (BB) completely.**

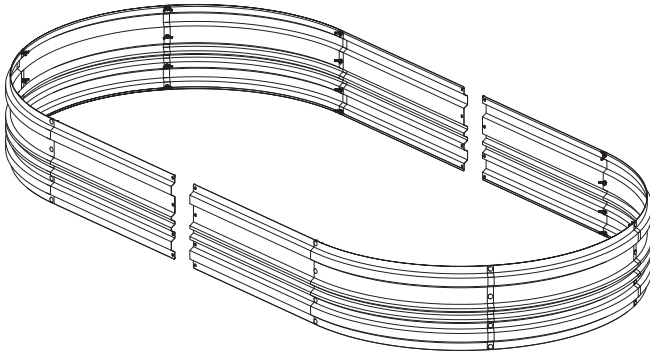

PART	A	B	AA	BB
DESCRIPTION	Corner Panel	Straight Panel	Bolt	Wingnut
QTY	3	2	16	16

STEP 5: ASSEMBLE THE U-SHAPED FRAMES AND HALF BRACING ROD

- Attach four half bracing rods (C) to the U-shaped frame, thread the bolt (AA) through two straight panel (B) and bracing rod (C), secure with wingnut (BB).
- Repeat the above procedure for the other four half bracing rods (C).

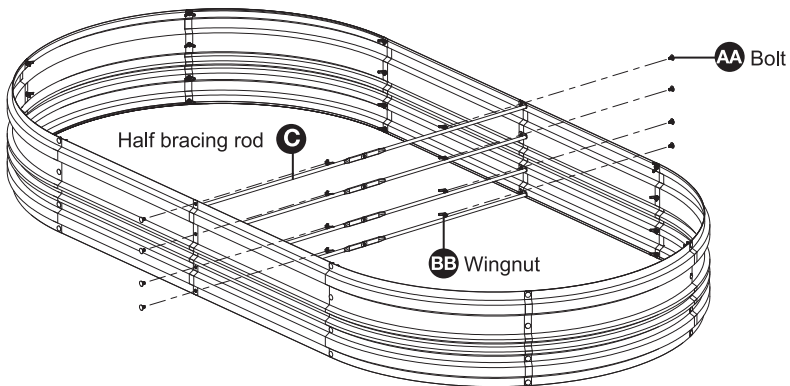


PART	C	AA	BB
DESCRIPTION	Half bracing rod	Bolt	Wingnut
QTY	8	8	8

ASSEMBLY

STEP 6: ASSEMBLE THE HALF BRACING ROD

- Assemble two half bracing rods (C) together with one bolt (AA) and one wingnut (BB) and finger tighten to desired tightness.
- Repeat the above procedure for the other six half bracing rods (C).
- Tighten all the bolts (AA) and wingnuts (BB) completely using the electric drill with supplied wingnut driver.

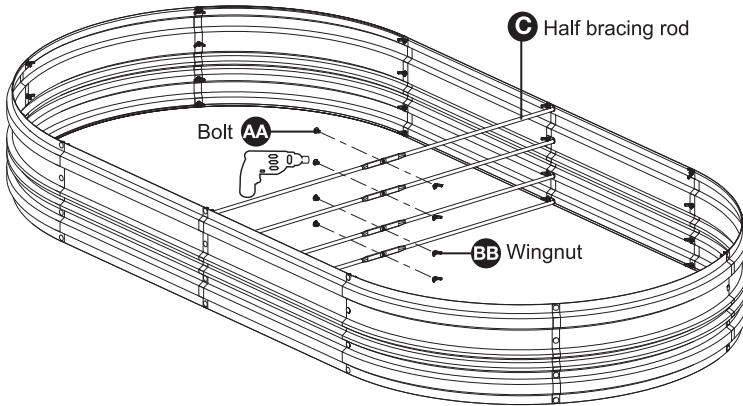

PART	AA	BB
DESCRIPTION	Bolt	Wingnut
QTY	4	4

CUSTOMER SERVICE

If you are having difficulty in using this product and require support, please send an email to service@greatstartools.com or call 877-876-7562.