


W082127A

WORKPRO

OPERATOR'S MANUAL 48 X 22" HEAVY-DUTY ADJUSTABLE WORKBENCH WITH LEVELING FOOT AND CASTER

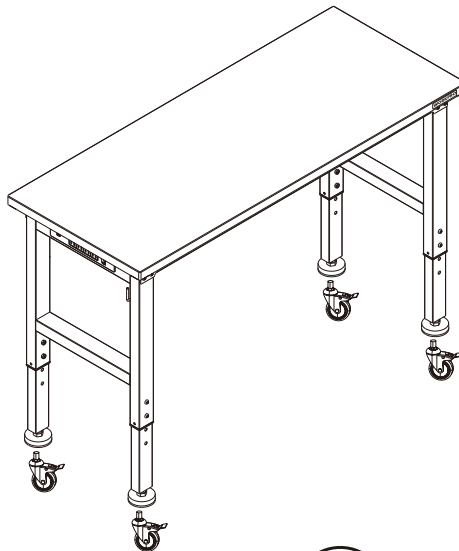

USE PRECAUTION
For your safety



**INSTRUCTION
MANUAL**
Read and understand



EYE PROTECTION
Must be worn



PROTECTIVE GLOVES
Must be worn when
assembly



CAUTION: Read and follow all Safety Rules and Operating instructions before first use of this product.
NOTE: Ensure all components are present. If any components are missing, do not proceed with assembly. Please send an email to service@greatstartools.com or call 877- 876-7562.



Distributed by:
Hangzhou GreatStar Industrial Co., Ltd.
No.35 Jiuhuan Road, Shangcheng
District, Hangzhou, China
www.greatstartools.com
MADE IN CHINA

TABLE OF CONTENTS

Safety Information----- 3-4

Specifications----- 4

Package Contents----- 5

Assembly----- 6-9

Power Strip Removal----- 9

Cleaning and Maintenance----- 10

Customer Service----- 10

FOR YOUR SAFETY: CAREFULLY READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USE.

SAFETY INFORMATION

To reduce the risk of serious injury, read and follow the safety instructions below before assembling and using this product.

1. THIS PRODUCT IS INTENDED FOR INDOOR USE ONLY.

2. THIS PRODUCT IS NOT DESIGNED FOR COMMERCIAL NOR INDUSTRIAL USAGE.

CAUTION!

- Check all nuts and bolts periodically for tightness. When required, tighten them.
- DO NOT leave children unattended near this product.
- Keep the product on level surfaces. The product could become unstable and it may tip over if stored or moved on an uneven surface, which may cause personal injury, death or product damage.
- DO NOT alter this product in any manner. For example, do not weld external bar locks or attach electrical equipment. This may cause product damage or personal injury.
- Any assembly or maintenance of the product must be carried out by adults only.
- Use at least two people to assemble or install this workbench. Failure to do so can result in personal injury or product damage.
- DO NOT stand on the product and do not use it as scaffold.
- Do not pull this unit, push it when moving.
- Use the brakes when this product is not being moved. This prevents the product from rolling.
- Maintain proper footing and balance at all times.
- Keep children and bystanders away while loading, unloading and moving the product.
- Do not exceed the maximum product evenly distributed weight, including contents.

3. EXTENSION CORD:

- Only use a three-wire extension cord with all three prongs intact. Never remove the round grounding prong.

Extension cord must be connected to a 125Volt GFCI protected outlet with proper ground. If GFCI outlet is not available, use an extension cord with GFCI protection built in.

Check the insulation and plugs of extension cord before using. Do NOT use cord if it is worn or damaged.

Do NOT overload extension cord.

Do NOT connect extension cord to outlet that also supplies critical safety equipment with power.

Make sure the power supply cord is unplugged before any servicing or cleaning.

4. ELECTRICAL SHOCK HAZARD:

- Do not plug cord into outlet with wet hands.
- Do not use this workbench near a bathtub, a shower, or a swimming pool.
- Workbench plugs must match the outlet.
- Never modify the plug in any way.
- Unmodified plugs and matching outlets will reduce the risk of electric shock.
- Avoid body contact with earthed or grounded surfaces. There is an increased risk of electric shock if your body is earthed or grounded.

5. THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

"Please note that changes or modifications of this product are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

SAFETY INFORMATION

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS

1. WORKBENCH INSTALLING WITH LEVELING FEET

Maximum load of workbench	1500 lbs.
Adjust height of workbench	30 ½" - 39 ¾"
The length x width of table	48" x 22"
Maximum output of power strip	1875 watts
USB Current	5V DC, 2.1A

2.WORKBENCH INSTALLING WITH SWIVEL CASTERS

2.1 MAXIMUM CAPACITY WHEN MOVING THE WORKBENCH



NOTE:

- With the help of swivel wheels, you can easily move the workbench on a leveled workspace. Please push the workbench without load.

Maximum product weight for workbench (evenly distributed)	500 lbs
---	---------

2.2 MAXIMUM CAPACITY WHEN LOCKING THE WORKBENCH




NOTE:

- Place the workbench close to the wall and step down the levers to lock the swivel casters.

Maximum product weight for workbench (evenly distributed)	1000 lbs
Adjust height of workbench	33"-40 15/16"

PACKAGE CONTENTS

Ensure all components are present. If any components are missing, do not proceed with assembly. Please send an email to service@greatstartools.com or call 877- 876-7562.

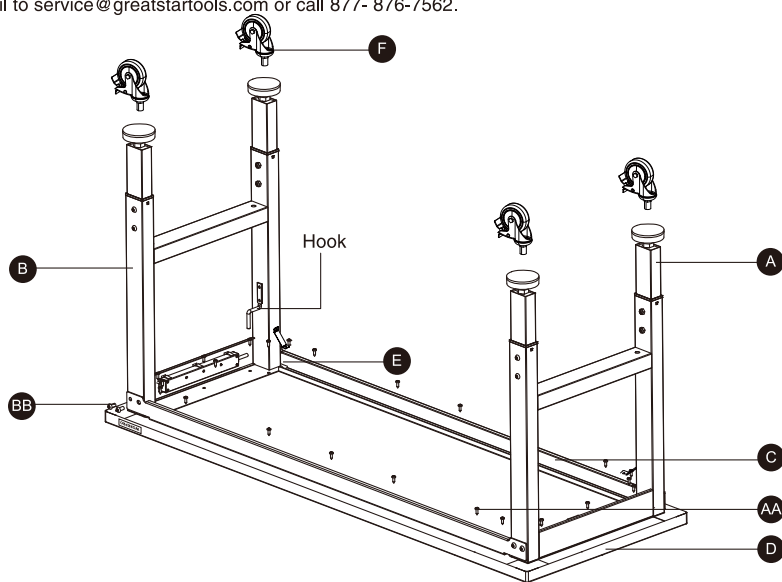

PART	PIC	DESCRIPTION	QTY
A			1
B		Leg with power strip	1
C		Beam	2
D		Rubber wood top	1
E		Support rod	4
F		Swivel caster with brake	4
AA		#5x20 Phillips head self tapping screw	22+2
BB		M8x20 Inner hexagonal head bolt	12+2

TOOLS REQUIRED
(NOT INCLUDED) :

Electric Drill

PH2
Screwdriver

13mm
Combination Spanner

17mm
Combination Spanner

3/16"(5mm)
Hex Key


ASSEMBLY

NOTE:

- Assemble on a flat surface. A piece of cardboard is recommended to keep the product from being scratched during assembly.
- Do not tighten all the screws before the step 3.

STEP 1: ATTACH THE BEAMS


- Attach the leg (A) and Leg with power strip (B) to beams (C) with 8pcs bolts (BB).

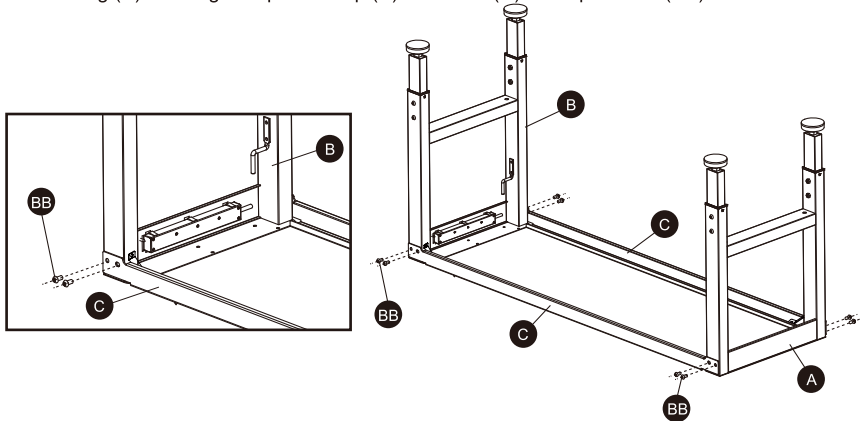

PART	A	B	C	BB
DESCRIPTION	Leg	Leg with power strip	Beam	Bolt
QTY	1	1	2	8

STEP 2: ATTACH THE SUPPORT ROD

- Align the support rod's (E) **LARGE HOLE** with legs (A&B) using 4pcs bolts (BB).

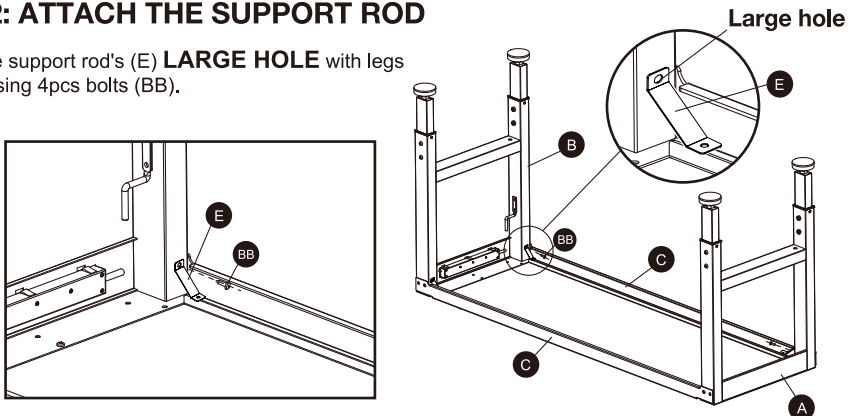

PART	E	BB
DESCRIPTION	Support rod	Bolt
QTY	4	4

ASSEMBLY

STEP 3: ATTACH THE RUBBER WOOD TOP




- Place rubber wood top (D) facing down on a flat surface with positioning labels facing upward. Use soft moving blanket or packaging material to protect the top during assembly.
- Align the legs with the corresponding positioning labels, and attach the support pole (E) to the beams using 4pcs screws(AA) by an electric drill.
- Install the legs (A&B) & beams (C) on the rubber wood top (D) using 18pcs screws (AA) by an electric drill.

NOTE:

Since the wood is hard, an electric drill is recommended when assembling.

NOTE:

We recommend that the leg with power strip is assembled close to side of the brand "WORKPRO" . However, you can adjust the assembly position of the leg with power strip as you need.

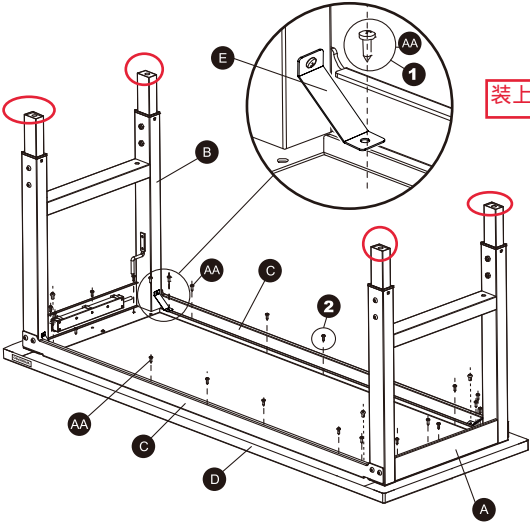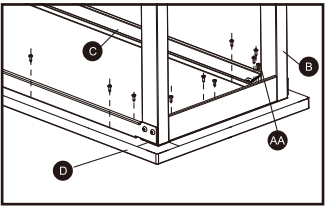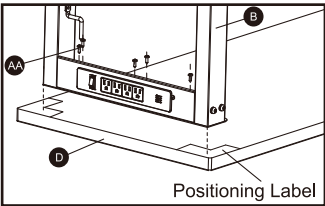

装上脚垫


PART	A	B	C	D	E	AA
DESCRIPTION	Leg	Leg with power strip	Beam	Rubber wood top	Support rod	Screw
QTY	1	1	2	1	4	22

ASSEMBLY

STEP 4: INSTALL THE CASTERS

NOTE:

- The workbench can be assembled with either four swivel casters with brake for mobility or attach the four leveling feet (pre-installed) for use as a stationary table or desk.
- Lay the workbench on its back.
- Remove the leveling foot counterclockwise.
- Step down the levers to lock the swivel casters with brake (F).
- Screw four swivel casters (F) into the legs (A&B) clockwise.


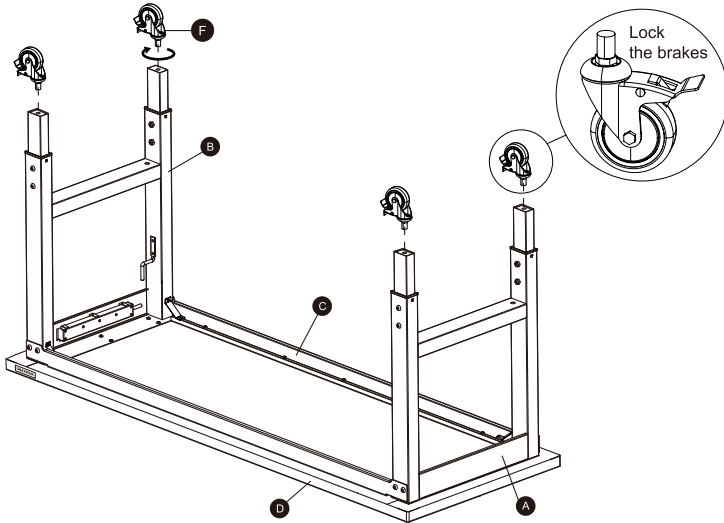


STEP 5: ADJUST THE HEIGHT OF WORKBENCH

- Adjust the position of screws by a 3/16"(5mm) hex key and 13mm combination spanner to acquire suitable height.

NOTE:


- Adjust height of table with leveling foot range is from 30 1/2" - 39 3/8" .
- Adjust height of table with swivel caster range is from 33" - 40 15/16" .

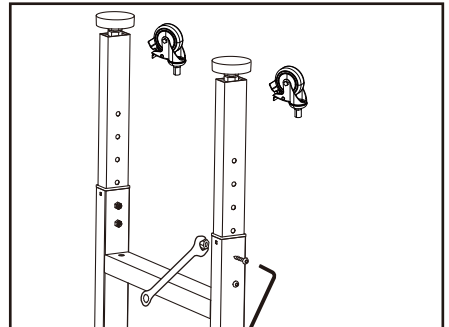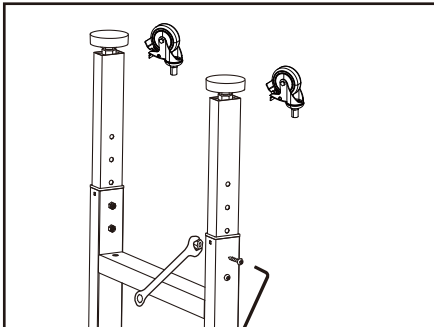

ASSEMBLY


STEP 6: ADJUST THE LEVEL OF WORKBENCH

- Easily leveled with its height-adjustable leg pads. Rotate the pad to the suitable position and lock with the corresponding nuts(M10) by the 17mm combination spanner.

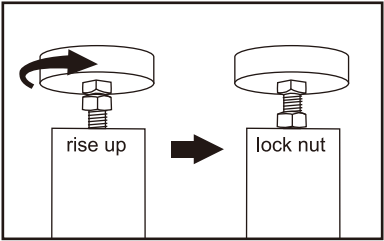

STEP 7: PLACEMENT OF POWER PLUG

- The power plug and cord are hung on the hook.

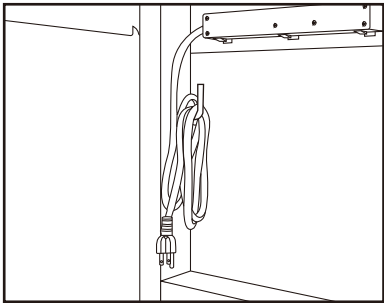


POWER STRIP REMOVAL

i NOTE:

We strongly recommend DO NOT remove the power strip. If you need to remove for any reason, you can do as follows.


- Unscrew 1 pc M4*10 bolt ②, and 1 pc M4 nut ③.
- Push the power strip ① in the right direction and take it out.

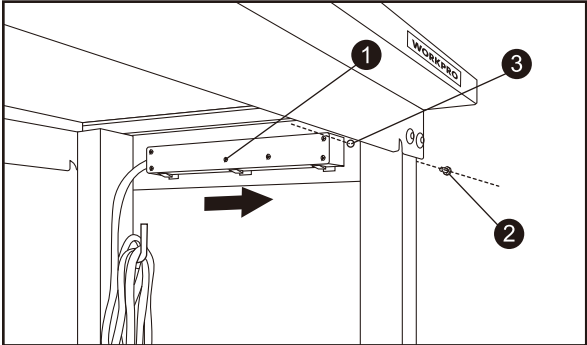

PART	①	②	③
DESCRIPTION	Power strip	M4x10 Bolt	M4 nut
QTY	1	1	1

CLEANING AND MAINTENANCE

- Check all nuts and bolts periodically for tightness. When required tighten them.
- Periodically clean the workbench surfaces with a soft rag and water. Grease and oil can be removed with most standard cleaning fluids. For safety, use a nonflammable cleaning fluid.
- Grease the casters annually using high quality bearing grease.

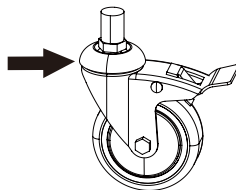

CUSTOMER SERVICE

If you are having difficulty in using this product and require support, please send an email to service@greatstartools.com or call 877-876-7562.